
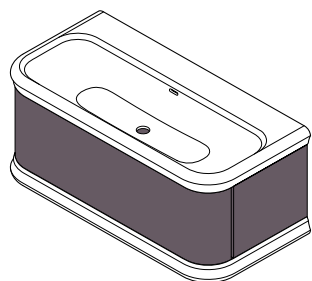



Lario

victoria ⊕ albert®

volcanic limestone baths

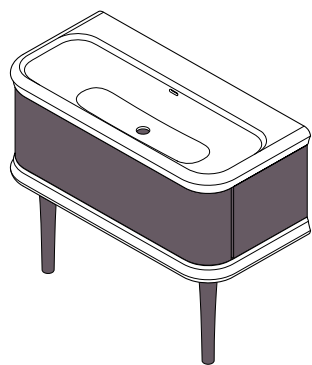


Fitting instructions Notice d'installation Instrucciones de montaje

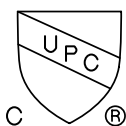


rich in
volcanic
limestone

www.vandabaths.com


LAR-N-100-**-IO/LAR-3TH-100-**-IO

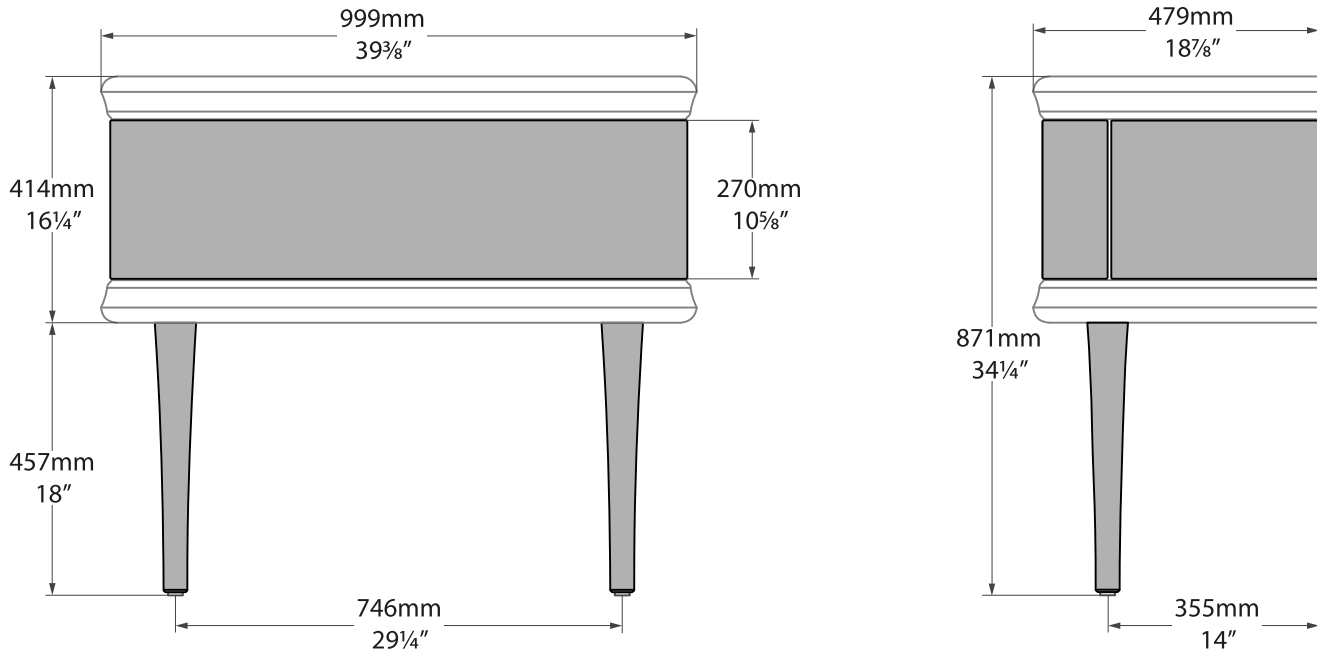

LARV-N-100-**-IO/LARV-3TH-100-**-IO

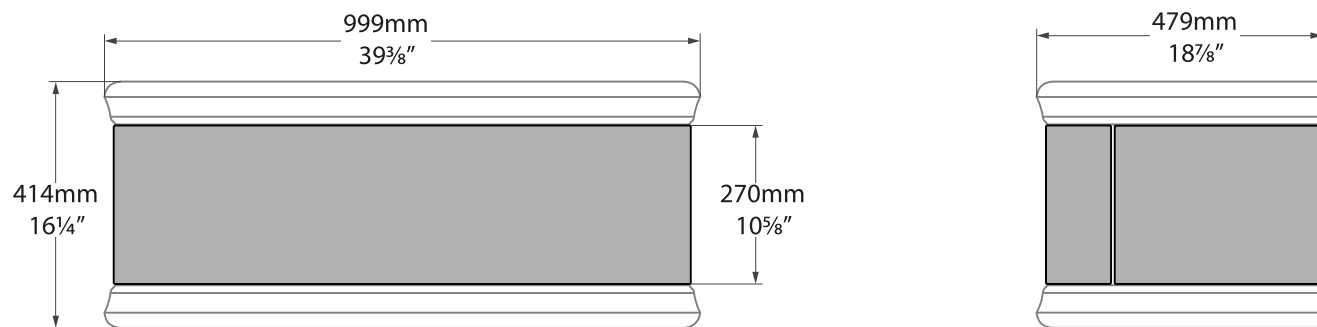

Rear View

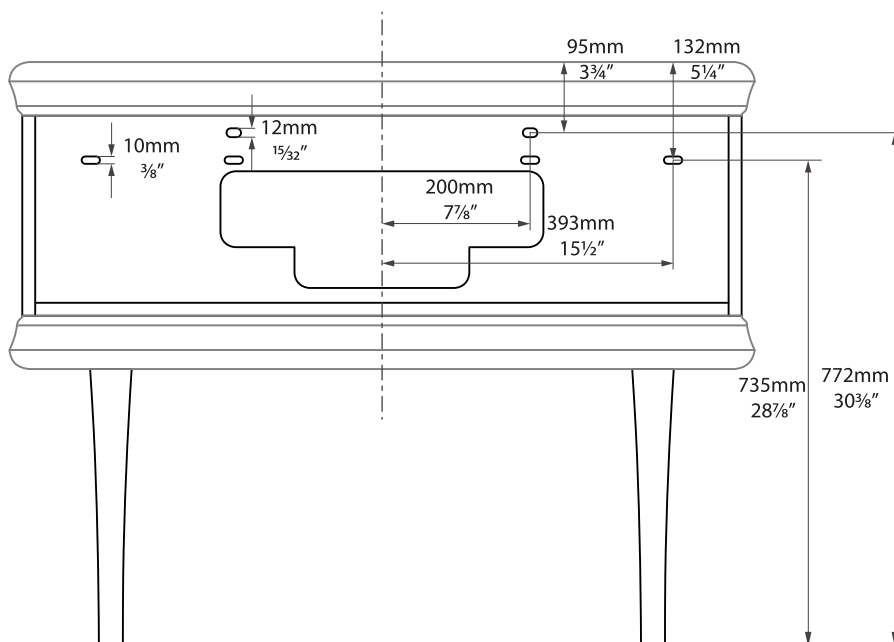


*All measurements subject to +/- 5% tolerance

- ! Check wall is sufficient to take weight and use the appropriate fixings (not supplied). Wall may need to be reinforced
- Victoria and Albert Baths recommend coach screws where possible when wall hung



1.



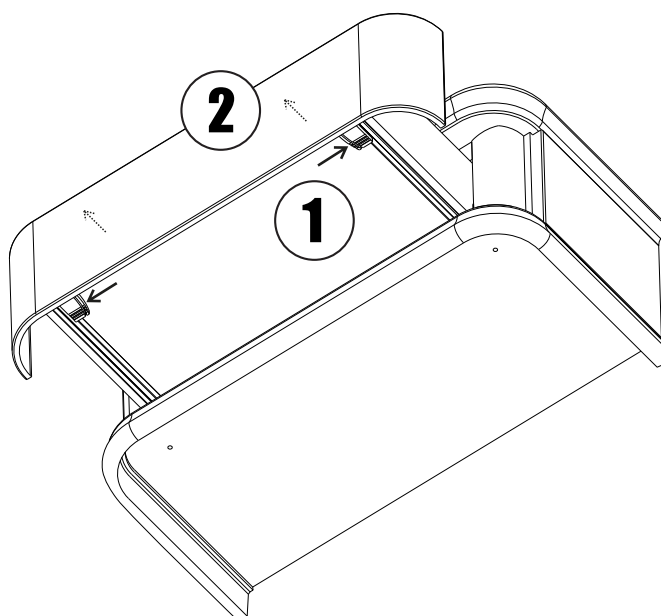





LAR-N-100-**-IO	✓
LAR-3TH-100-**-IO	✗
LARV-N-100-**-IO	✓
LARV-3TH-N-**-IO	✗



400 x 60mm
15 1/8" x 2 3/8"

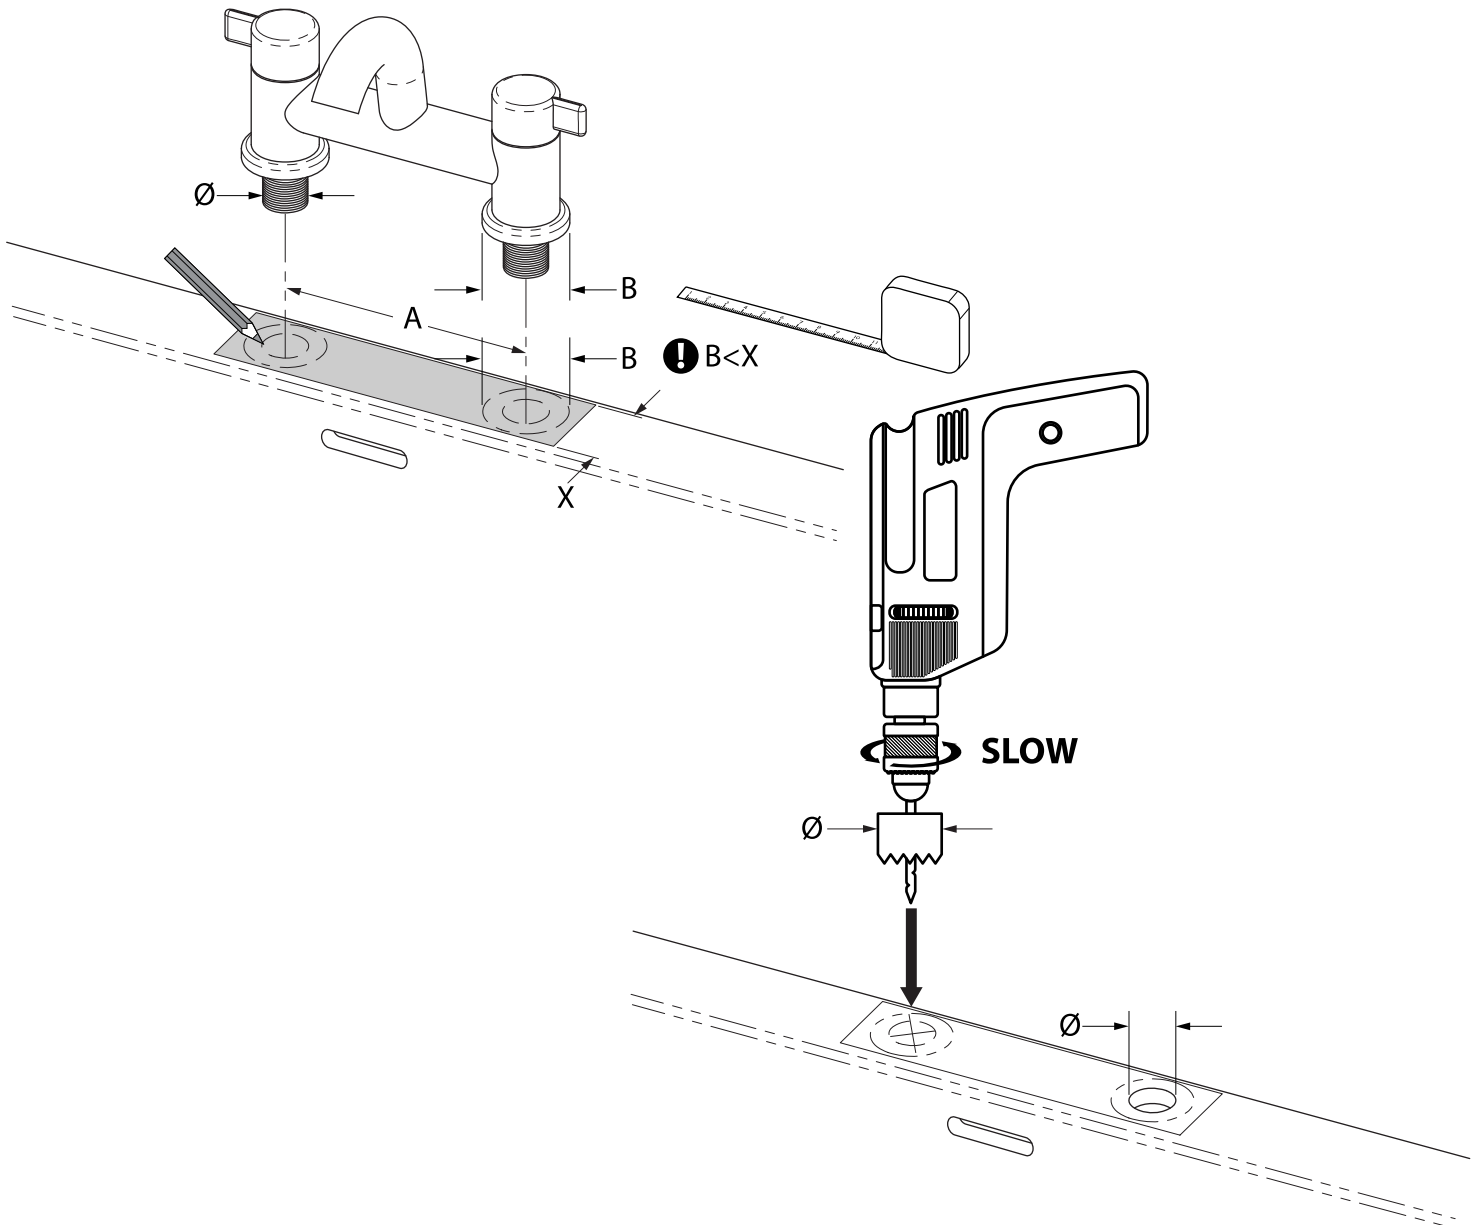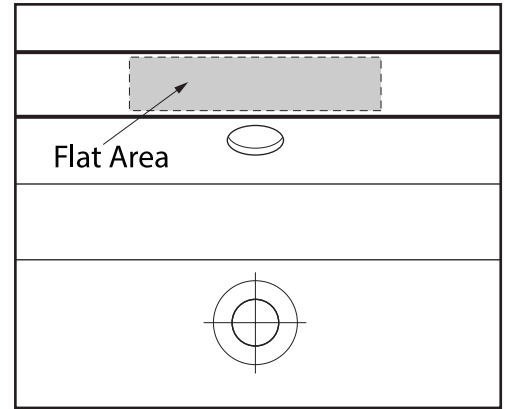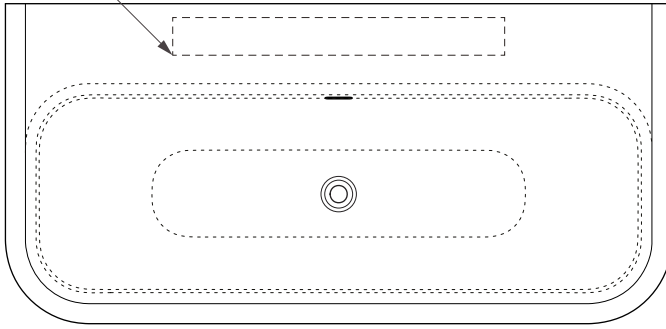

2a.

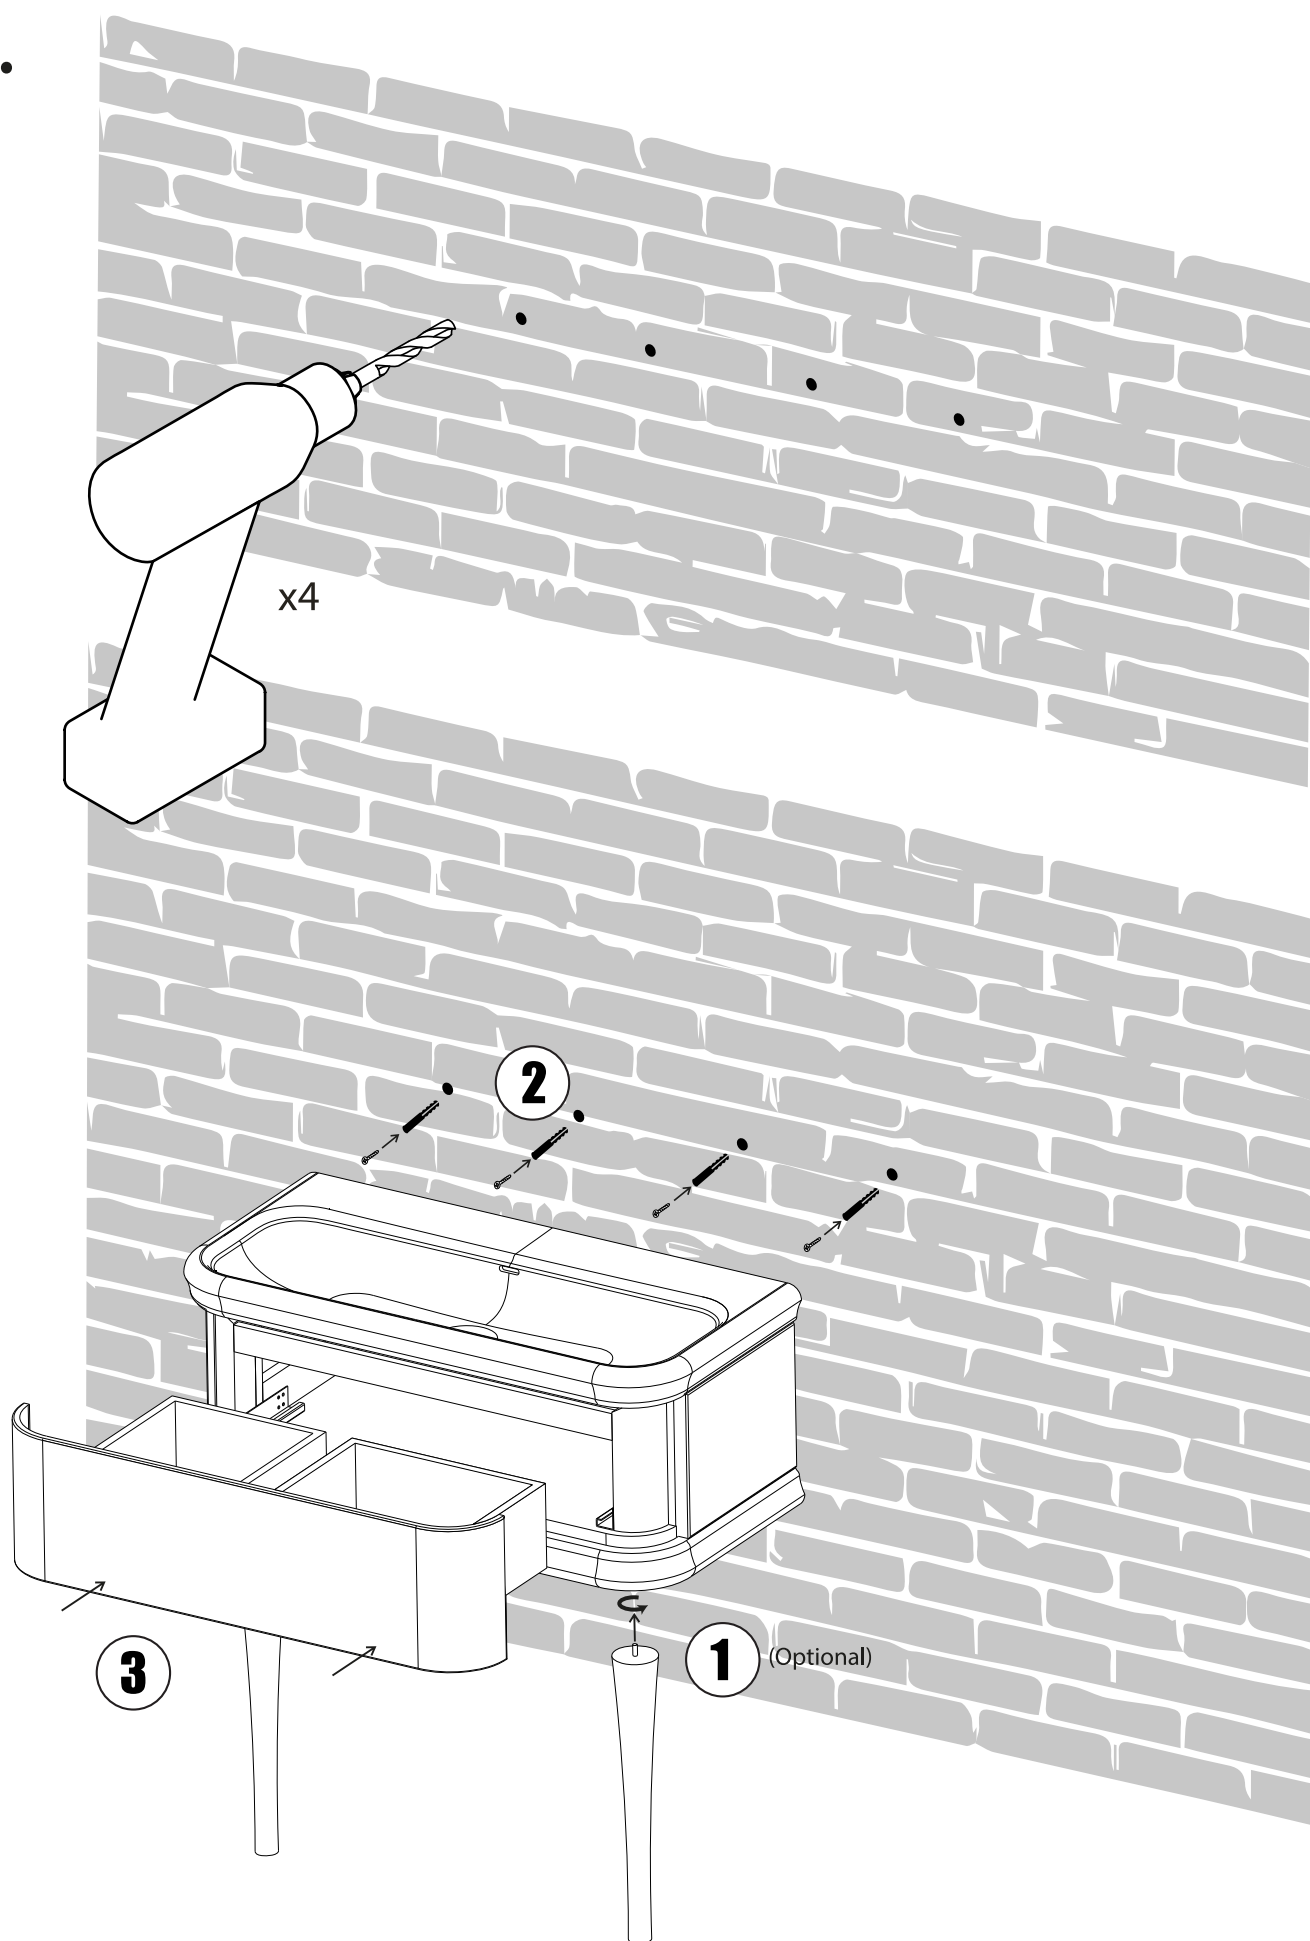

2b.

