


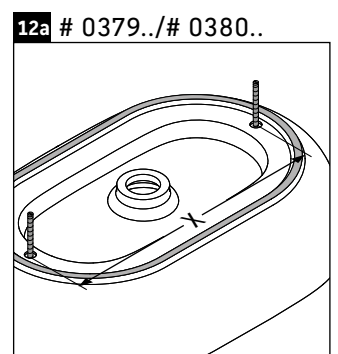
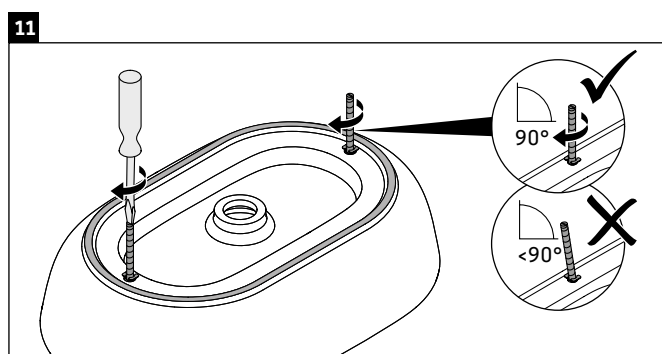
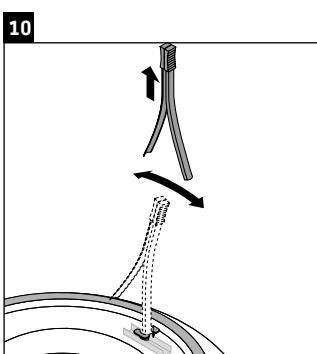
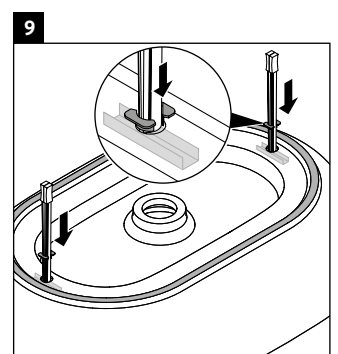
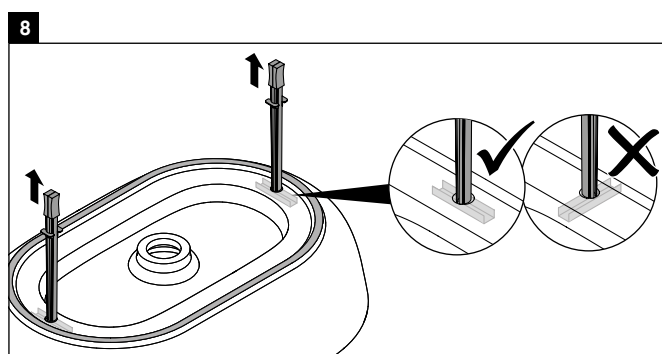
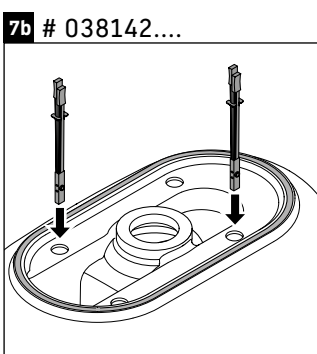
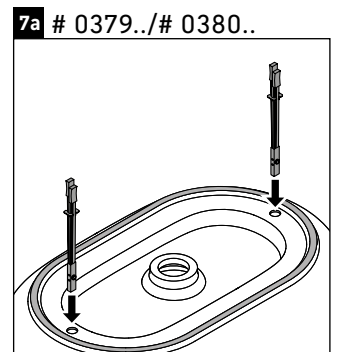
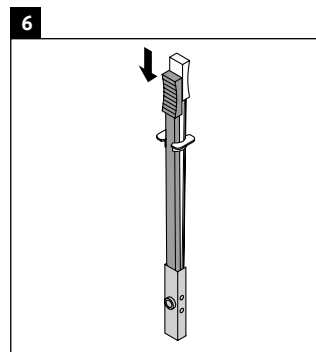
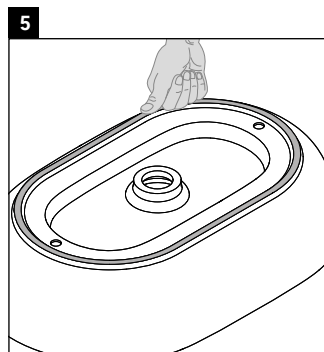
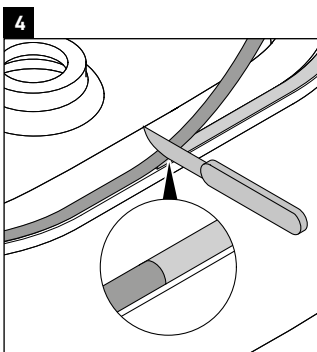
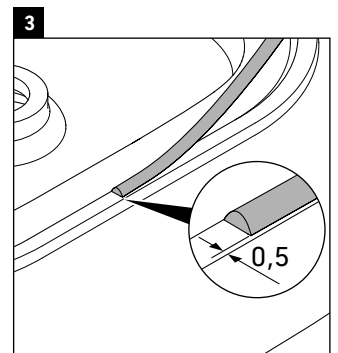
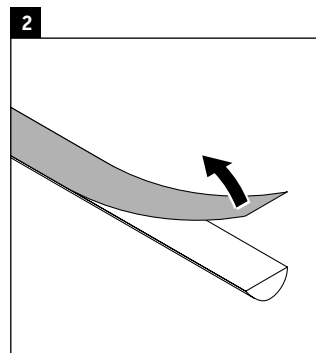
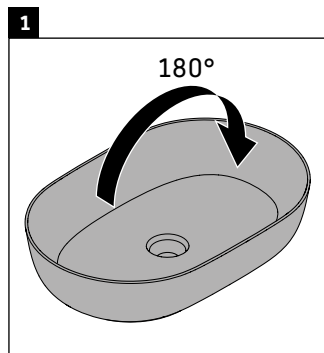
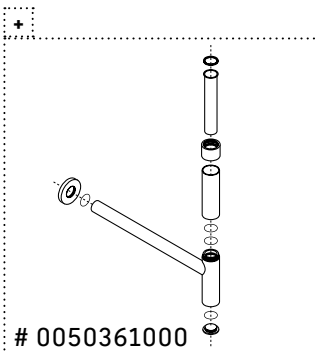
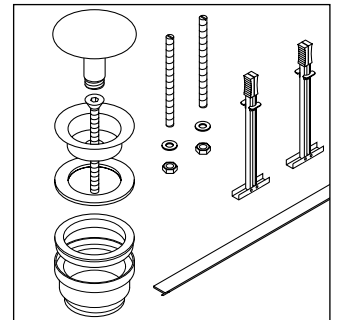


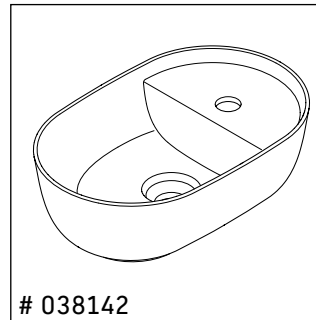


Leben im Bad
Living bathrooms

MOUNTING INSTRUCTIONS

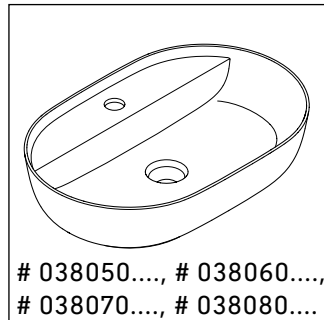


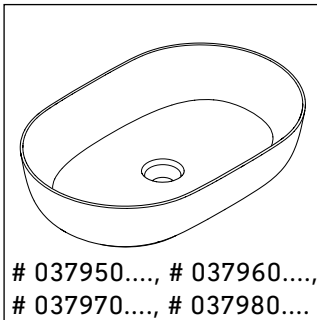


12b # 038142....

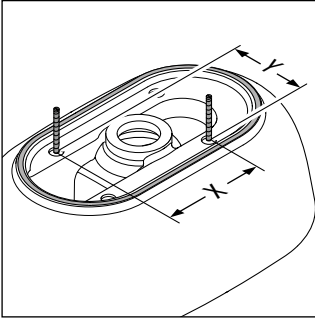


13a # 037950...., # 037960...., # 037970...., # 037980....

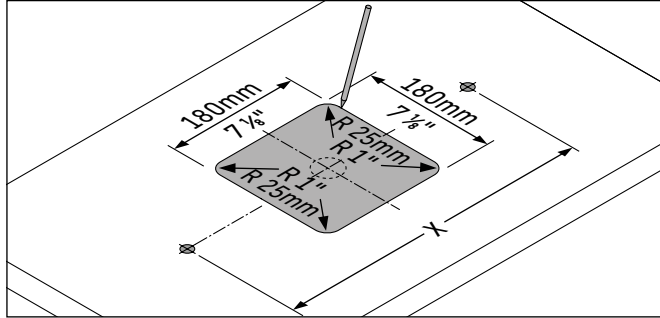

13b # 038050....

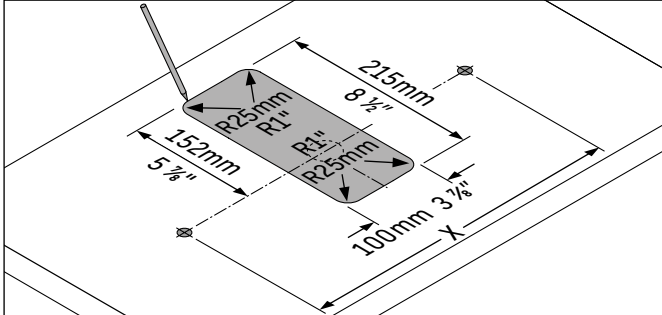

13c # 038060...., # 038070...., # 038080....

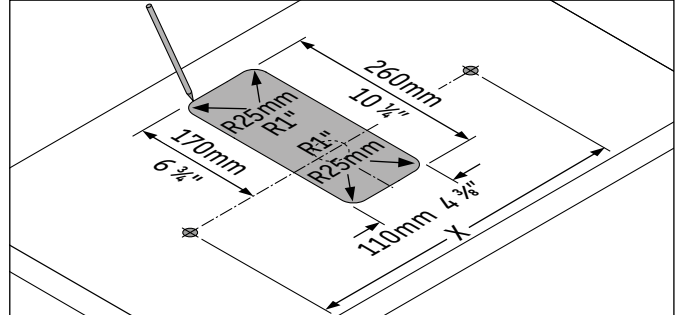

13d # 038142....

