


TA3240/TA4032/TA4000 Plug & Waste Installation

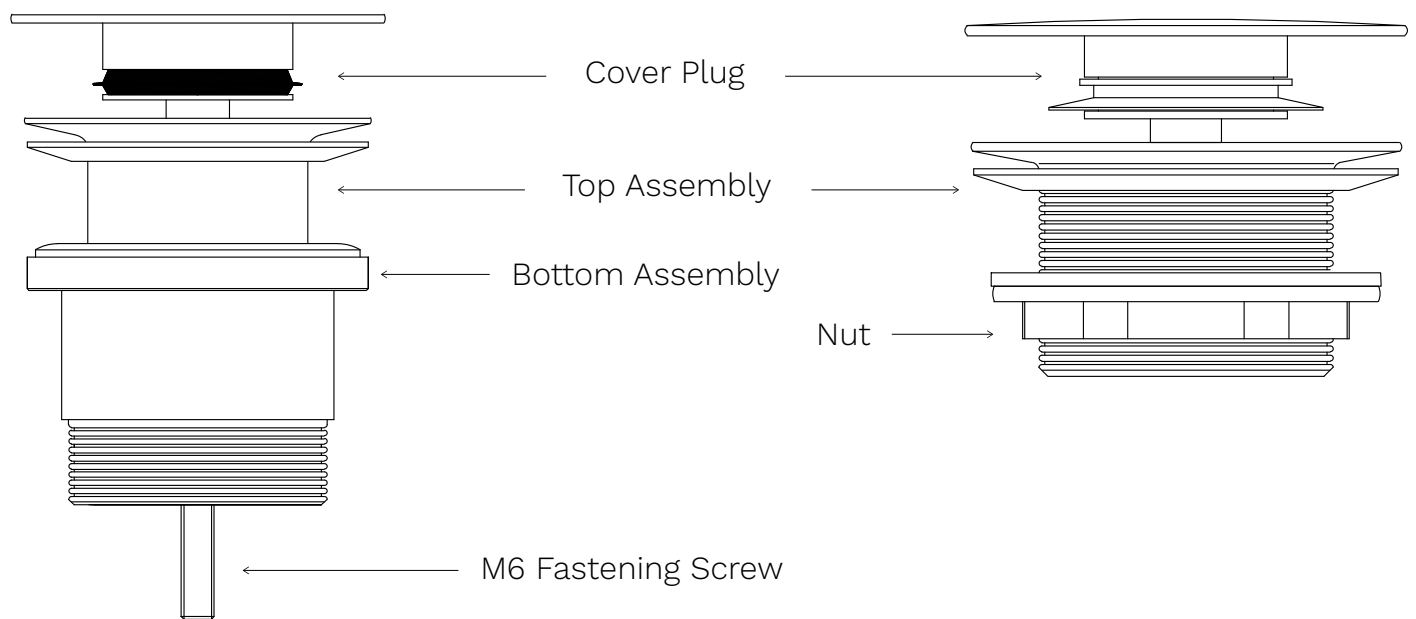

TA3240/TA4032
Basin

TA4000
Bath

INSTRUCTIONS:

1. Carefully remove the cover plug assembly from the waste by unscrewing the piston.
2. DO NOT REMOVE THE PACKING (protective plastic lid), TO AVOID DAMAGES.
3. Align and assemble the top assembly above the basin/bath.
4. Place the bottom assembly under the basin/bath.
5. For Basin: fasten the waste together with M6 screw from the top with a screwdriver. Do not use a cordless screwdriver.
6. For Bath: fasten the waste together with the nut from the bottom.
7. Assemble the pop up waste assembly.
8. Check the basin for leaks.

The installation of these waste plugs is subject to the requirements of the Plumbing Code of Australia (PCA) and the relevant installation standard AS/NZS3500.2 and applicable product standard WMTS 040

The limitation on the products use can be a maximum live load bearing of 1KN