


# FLOTATION TUB

## PJYD2200



• Cautions and warnings . . . . .	2
• Included parts . . . . .	4
• Required tools . . . . .	5
• Specifications . . . . .	6
• Dimension drawings . . . . .	7
• Electrical construction . . . . .	8
• Installation procedures . . . . .	9
• Meaning of the indications . . . . .	10
• Building a base for the bathtub . . . . .	10
• Installing the bathtub . . . . .	11
• Conduct a trial run . . . . .	14
• Finishing . . . . .	15

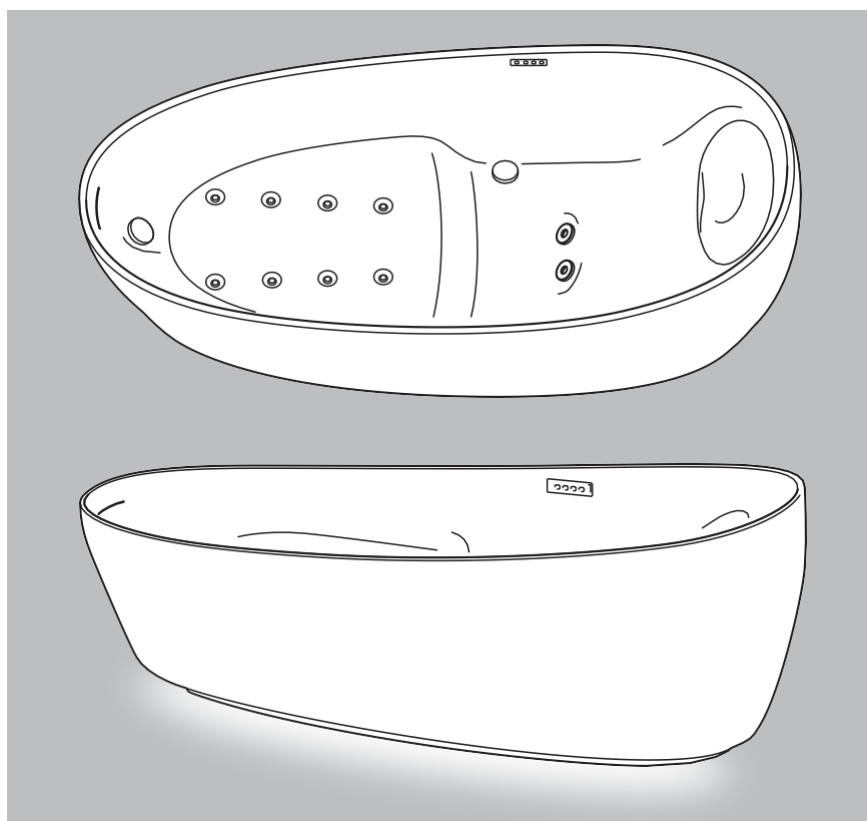

To service installers

Please explain the FLOTATION TUB functions and operation to the customers.  
Keep the power turned off when there is time until handing over the product in a new home.



# Cautions and warnings




Please read the installation manual and follow these cautions and warnings carefully before beginning the construction.

Follow all safety precautions and warnings.

 <b>WARNING</b>	When this appears next to a topic, this indicates that misoperation could result in death or serious injury.
 <b>CAUTION</b>	When this appears next to a topic, this indicates that misoperation may result in injury or physical damage.

- The following symbols are used to classify and explain instructions that must be followed.

Symbol example	Meaning of symbol
	This symbol indicates something that is "Prohibited".
	This symbol indicates something that is "Required".

 <b>WARNING</b>	
 Prohibited	<b>Do not stand on bathtub while working.</b> • Doing so could cause a fall or injury or damage the components.
	<b>Only install the supplied parts or directed parts, and do not apply any changes to them.</b> • Especially make sure not to change the dimensions of the product.
	<b>Do not bend, handle the power cords roughly or place heavy objects on them.</b> • This could result in a fire or electric shock.
 Always observe	<b>Make sure to follow the installation guide for installation.</b> • Incomplete installation can result in a fire or electric shock. Otherwise, there is a chance of leakage that could wet and cause damage to household property.
	<b>Make sure to follow the procedures for the drainage piping attachment.</b> • Defective construction can result in water leakage that could wet and cause damage to household property.
	<b>After unpacking, swiftly dispose of any unnecessary packing materials.</b> • The wood frame, nails, cardboard boxes, vinyl bags, or sealing straps may cause an injury. If children play with the packaging materials there is a risk of suffocation or other accidents.
	<b>Have a specialized electrician conduct all electrical work.</b> • If the work is not conducted properly, it may result in an injury or physical damage.
	<b>Attach a wiring circuit breaker and ground fault circuit interrupter (GFCI) to the electrical equipment of the bathtub.</b>
	<b>Attach the tap water supply equipment to the bathtub.</b>
	<b>Make sure to connect the ground wire (ground).</b>
	<b>Use the specified AC voltage for the voltage.</b> • This may result in damage or failure to the device or a fire.
	<b>After completing the installation, make sure to check the operation of the wiring circuit breaker and ground fault circuit interrupter (GFCI).</b> • If the GFCI is not properly operating, it may result in a fire or electric shock.



## WARNING



Always observe

**Make sure to install the bathtub according to the installation guide and in a stable location that can withstand its mass.**

- Defective installation can result in an injury caused by the bathtub falling or flipping over.

**When connecting the wiring, check to see that the power is turned off.**

- This may cause electric shock.

**Ensure that you have an ergonomic working position during transport and assembly.**

- Take care at every stage that your move is safe. Ensure that you have assistance to avoid risk of accident or injury.

**Observe the current local prevention of accidents and building regulations as well as sanitary and environmental protection rules during installation.**



## CAUTION



Prohibited

**Do not place a stepladder inside the bathtub or place heavy objects on the edge the bathtub.**

- This may cause damage.

**Do not drop or bump anything hard or heavy onto the bathtub.**

- This may cause the bathtub to crack and result in an injury, or leakage that could wet and cause damage to household property.

**Keep sources of heat at a distance.**

**Do not smoke.**

- Doing so could cause damage.

**Do not install the bathtub outdoors or in a location that is regularly exposed to sunlight (such as a sun room).**

- This may cause the bathtub to freeze and cause damage or discolouration.

**When delivering the bathtub, do not hold the hose or piping or bump anything hard against it.**



Always observe

**When opening the packaging, make sure that all of the supplied parts and the bathtub itself are not damaged, and if they are, do not use the damaged parts.**

- Replace any damaged parts.

**When installing the bathtub in a location that could result in damage due to water leakage, make sure to apply waterproof processing construction on the floor surface.**

- If there is water leakage, it may cause damage to the floor below.

**Remove the bathtub's protective sheet after the construction is completed.**

**Secure an area that enables proper space for the usage and maintenance of the bathtub.**

**Before completing the installation, make sure to confirm the sealability of each part.**

- If water leakage is detected, remove the cause of the leakage.

**Parts containing live parts, except parts supplied with safety extra-low voltage not exceeding 12 V, must be inaccessible to a person in the bath.**

**Parts incorporating electrical components, except remote controller devices, must be located or fixed so that they cannot fall into the bath.**

**The appliance must be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30 mA.**


**Earthed appliances must be permanently connected to fixed wiring**

**The product connection should comply with local wiring rules, and an all-pole switch should be connected at the front end of the product.**


**This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.**

## Included parts


A-1 : Bathtub

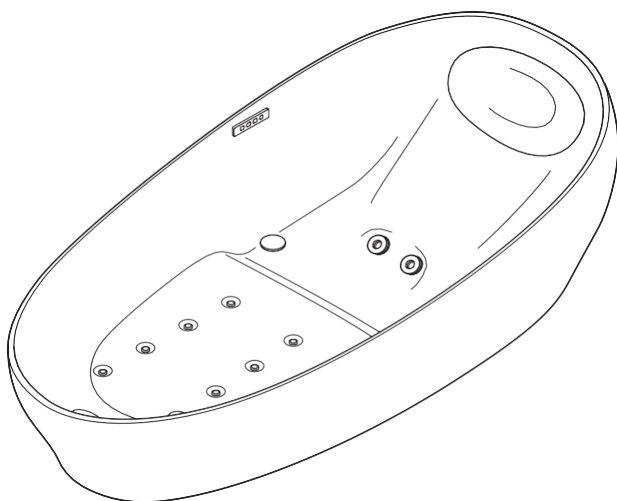

A-2 : Polyethylene foamed sheet

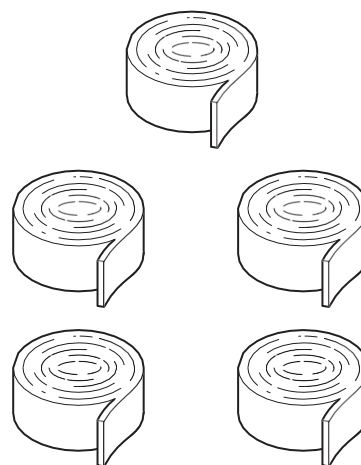


A-3 : Instruction manual

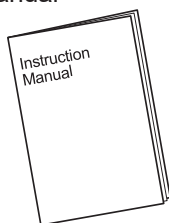



A-4 : Installation guide




A-5 : Cleaning spatula for NECK BATH

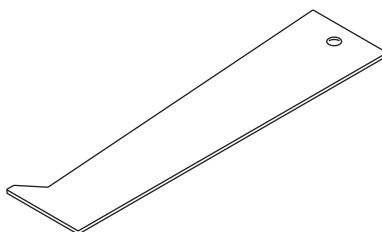

A-6 : Bathtub fixing plate set

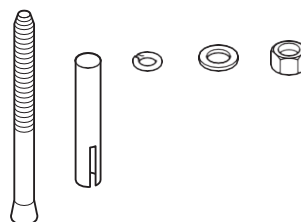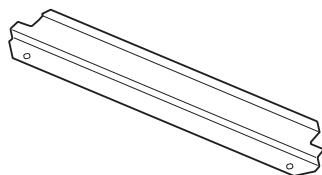


A-7 : Drain trap (PP)

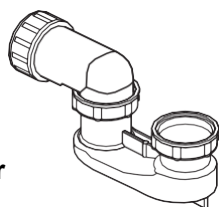

**Not available for  
Australia model**


A-8 : Flathead screwdriver (small)

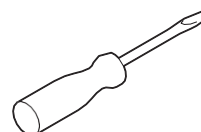


\*Hand over A-3, 5 to the customer after the construction is completed.

# Required tools


B-1

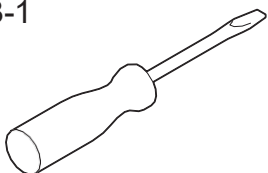


B-2

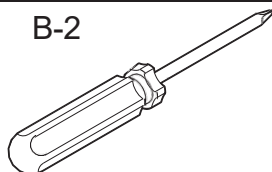

B-3

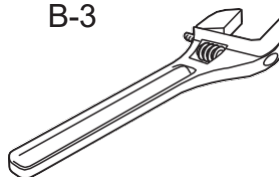


B-4

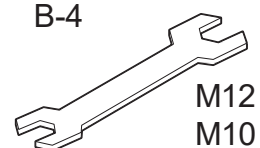


M12  
M10

B-5

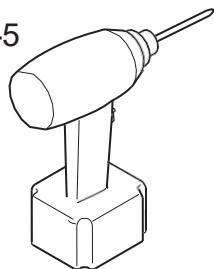


B-6

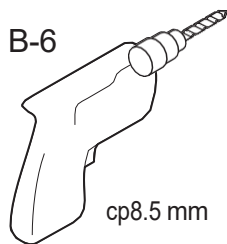


cp8.5 mm


B-7

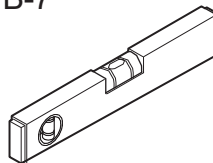


B-8

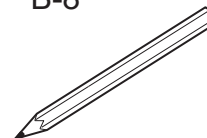


B-9

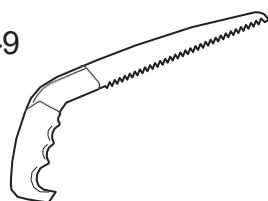

B-10

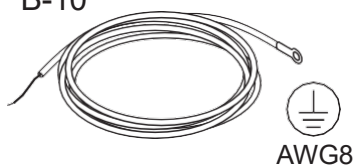


B-11

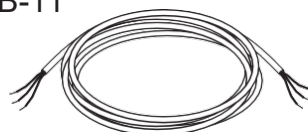


H05VVF  
3 x 1.5 mm<sup>2</sup>  
cp8-9 mm

B-12

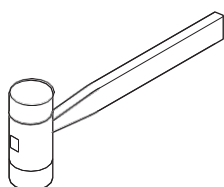


B-13

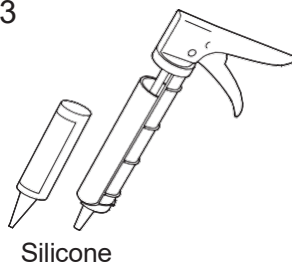

Silicone


B-14

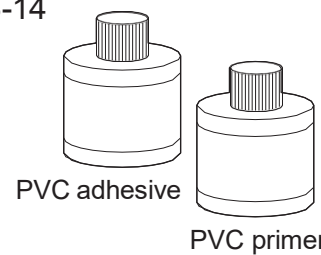


PVC adhesive

PVC primer


B-15

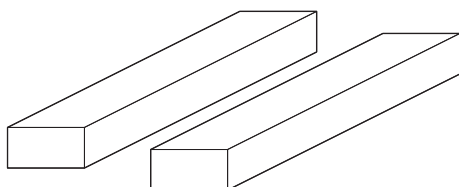

B-16

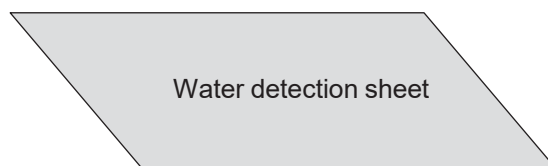


B-17

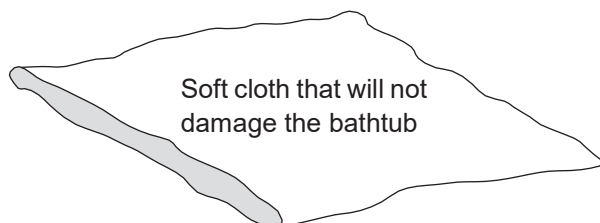


Soft cloth that will not  
damage the bathtub

B-18

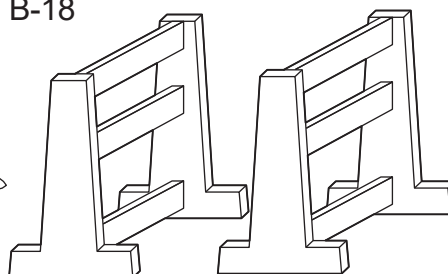


B-19

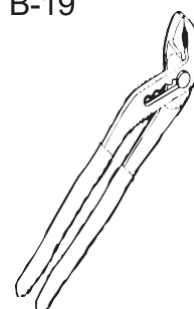

# Specifications


Item		Specifcations
External dimensions		2200 mm (L) × 1050 mm (W) × 780 mm (H)
Bathtub depth		394 mm
Capacity		293 L
Weight		170 kg
Materials		GALALINE (GALALINE is an artificial marble made of GFRP sandwich structure.)
Drainage method		Normal drainage (partial electrical valve automatic drainage) + Overflow drainage
Drain plug		Push-operated drain plug
Drainage rate (with trap)		48 L/min
Overflow rate (with trap)		48 L/min
AIR-JET	Number of jet ports	8 locations
	Ejection air amount	Approx. 400L/min. (Strong mode) Approx. 250L/min. (Weak mode)
NECK BATH (Circulation)	Number of intake parts	1 location
	Number of water outlets	1 location
	Water discharge fow rate	Approx. 18 L/min
HYDROHANDS (Circulation)	Number of intake parts	1 location
	Number of water outlets	2 locations
	Water discharge fow rate	Approx. 60 L/min
LED lighting	Irradiation part	1 location
	Irradiated colour	1 colour
Controller		Electrostatic capacitance-type touch panel
Rated voltage		220-240V AC
		Philippines/Saudi Arabia 220V AC
Rated frequency		50 Hz
		Philippines/Saudi Arabia 60 Hz
Rated current		3.5-4.0 A
		Philippines/Saudi Arabia 4.0 A
Rated power consumption		700-850 W
		Philippines/Saudi Arabia 850 W
Standby power consumption		2.8 W
Safety devices		Continuous operation preventing device Overcurrent protection device Overheating protection device (thermal protector)

# Dimension drawings

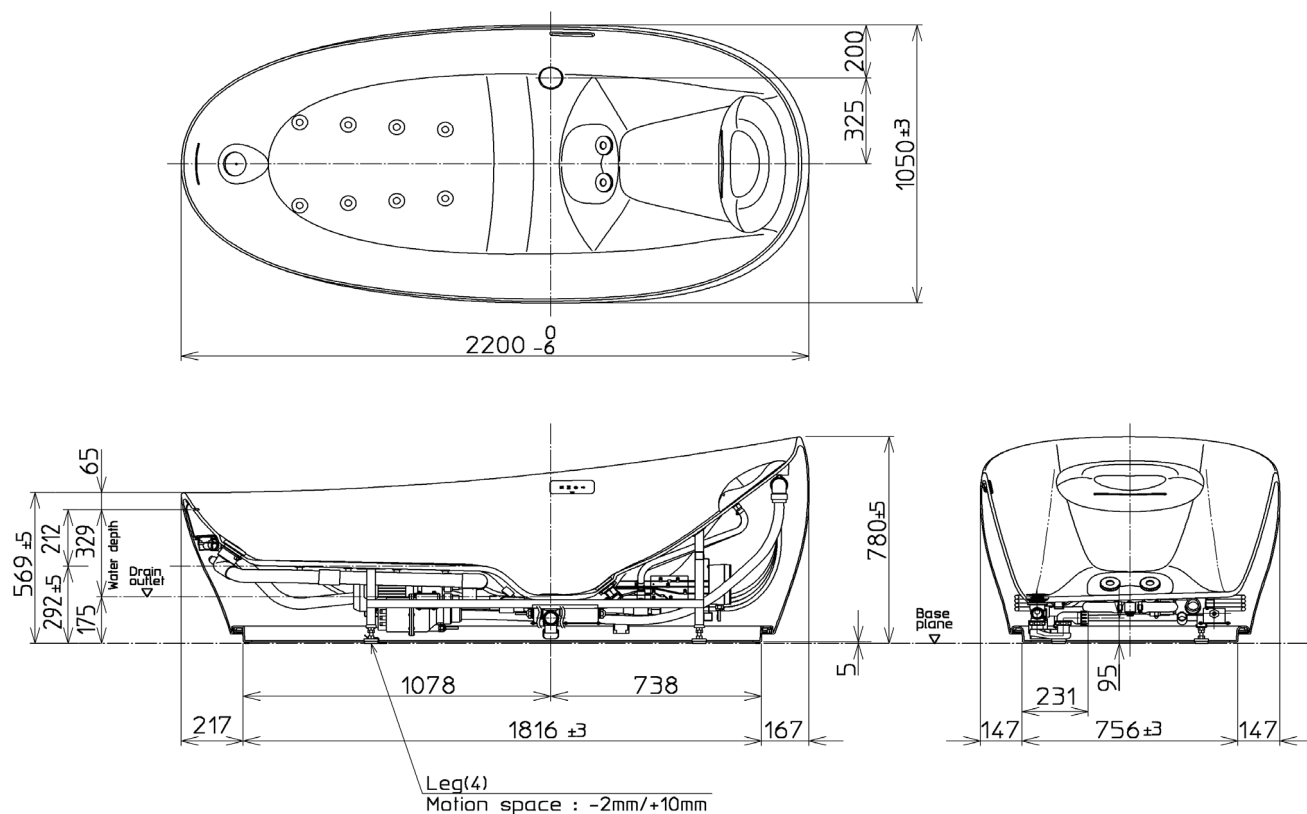


**[In case of attaching an option (loor standing bathtub filler)]**

For an optional water faucet, ask the dealer, contractor from whom you purchased the product, or TOTO.

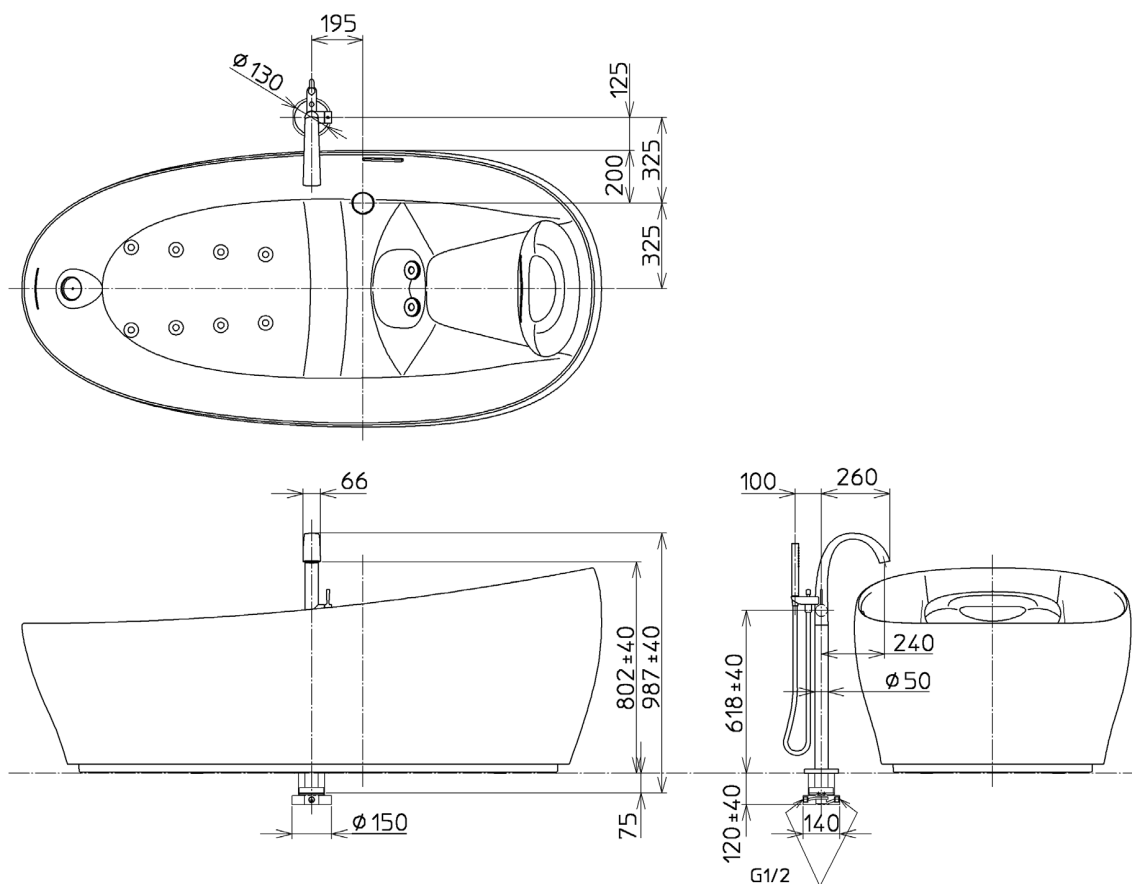

# Electrical construction

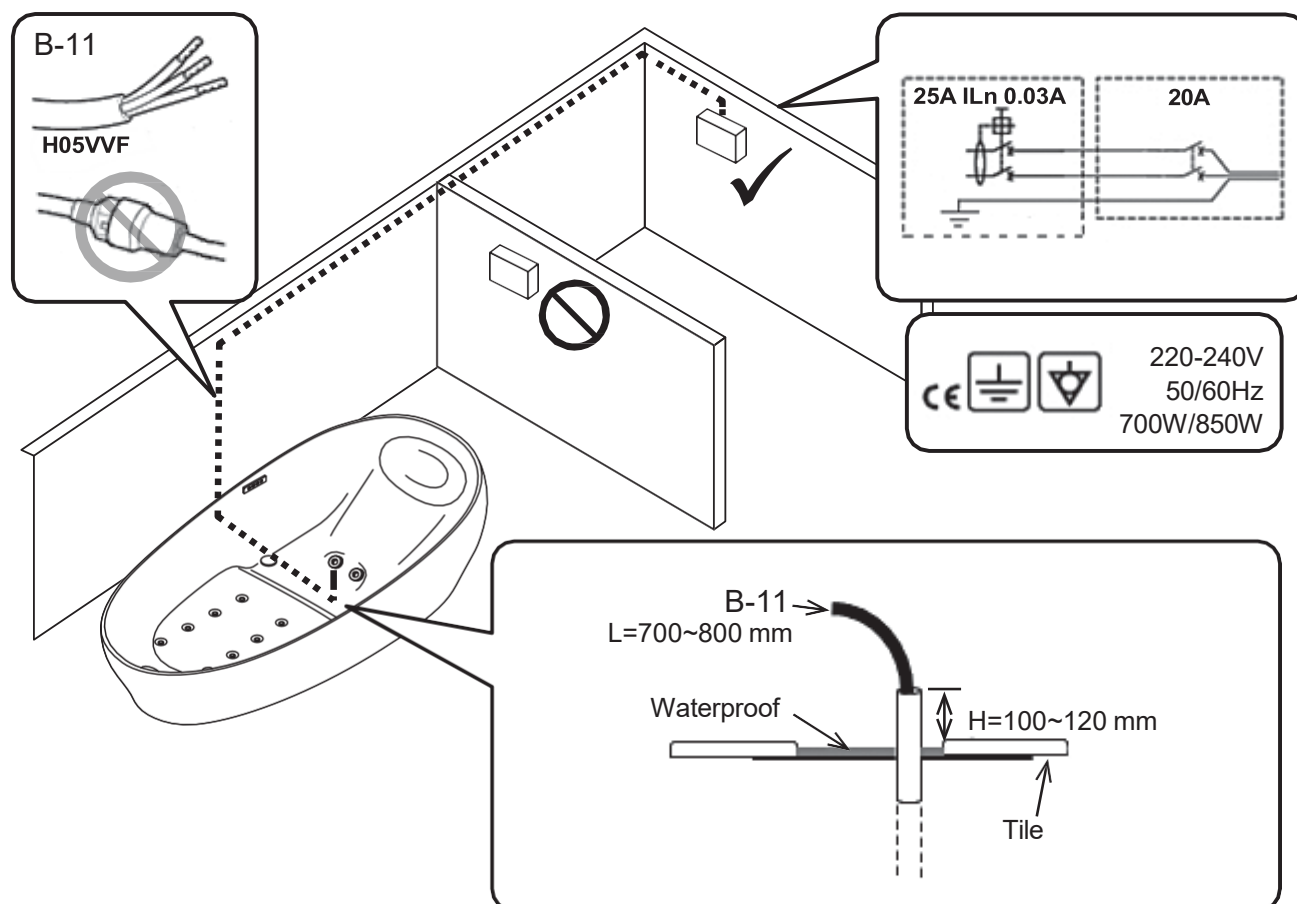

Turn the wiring circuit breaker off during operation.



Protect the product with a wiring circuit breaker (ILn 0.03A and 25A differential switch, 20A magnetic thermal switch) and ground fault circuit interrupter (GFCI). Install both switches outside of the bathroom.



Use a fixed connection to supply power to the bathtub. Do not extend or relay the power cord, connect it as 1 cord.




When installing the bathtub, do it within the protection area and make sure that the person does not touch any electrical devices from inside the bathtub. Install the bathtub over 600 mm away from any electrical appliances or power sockets.




Install correctly as shown in the wiring rules diagram above. parts of Appliance are installed in the correct zone and that equipotential bonding is carried out.





# Installation procedures

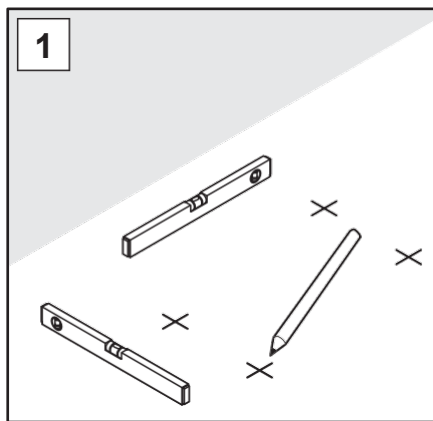



>>P.10

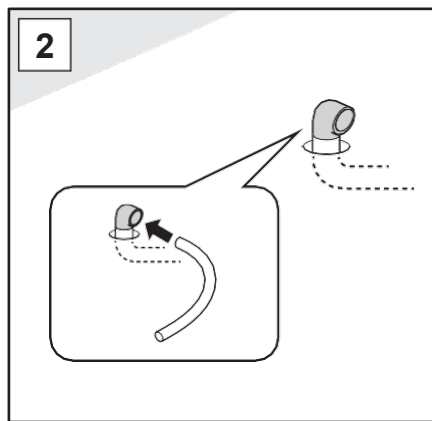




>>P.11

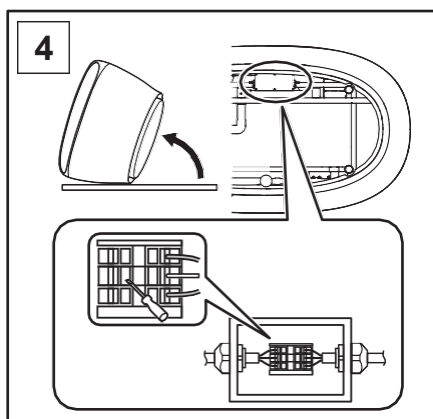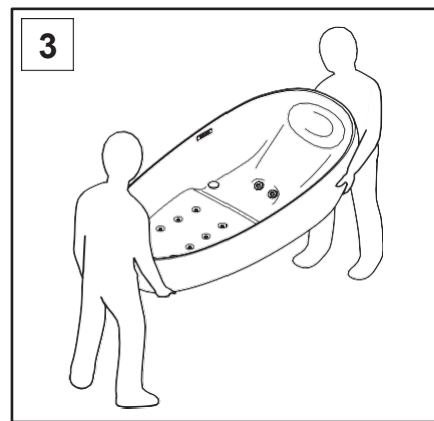



>>P.12

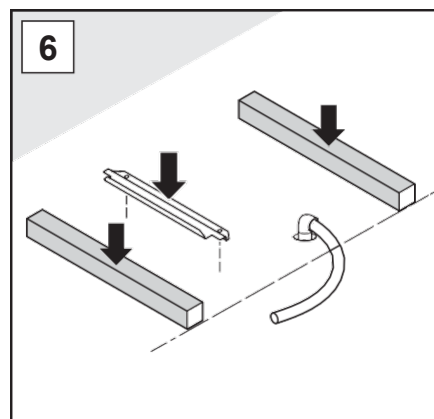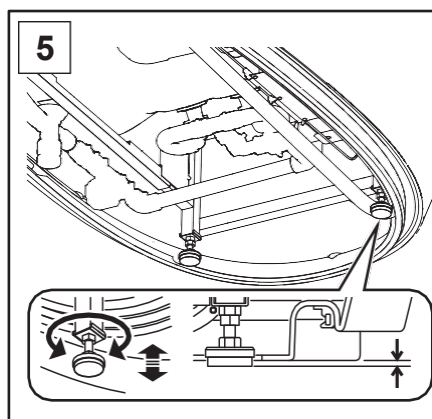


>>P.13

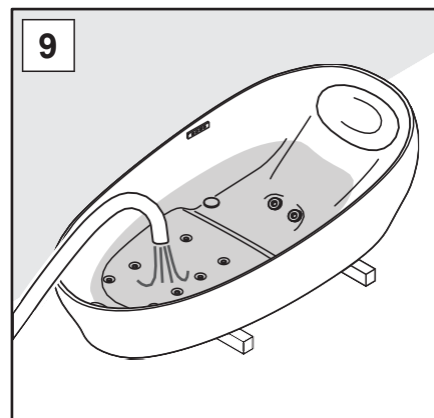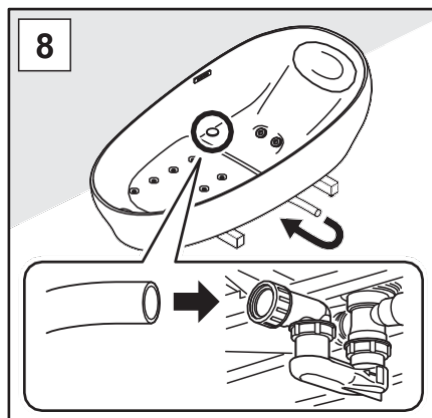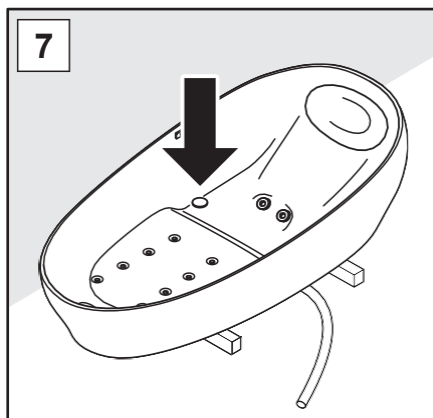


>>P.14

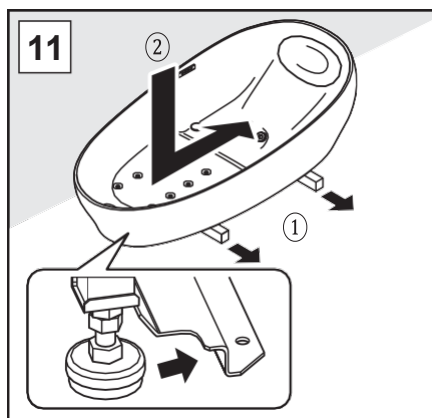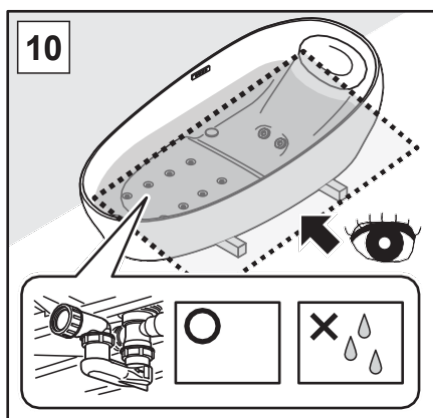

>>P.15



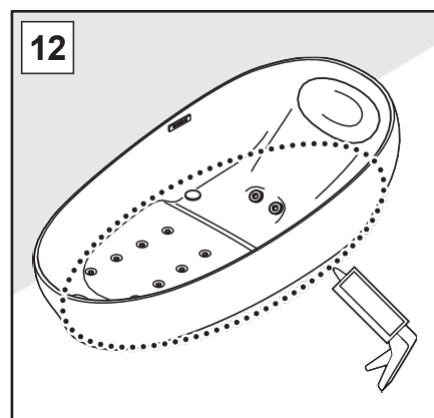


## Meaning of the indications



## Building a base for the bathtub


1

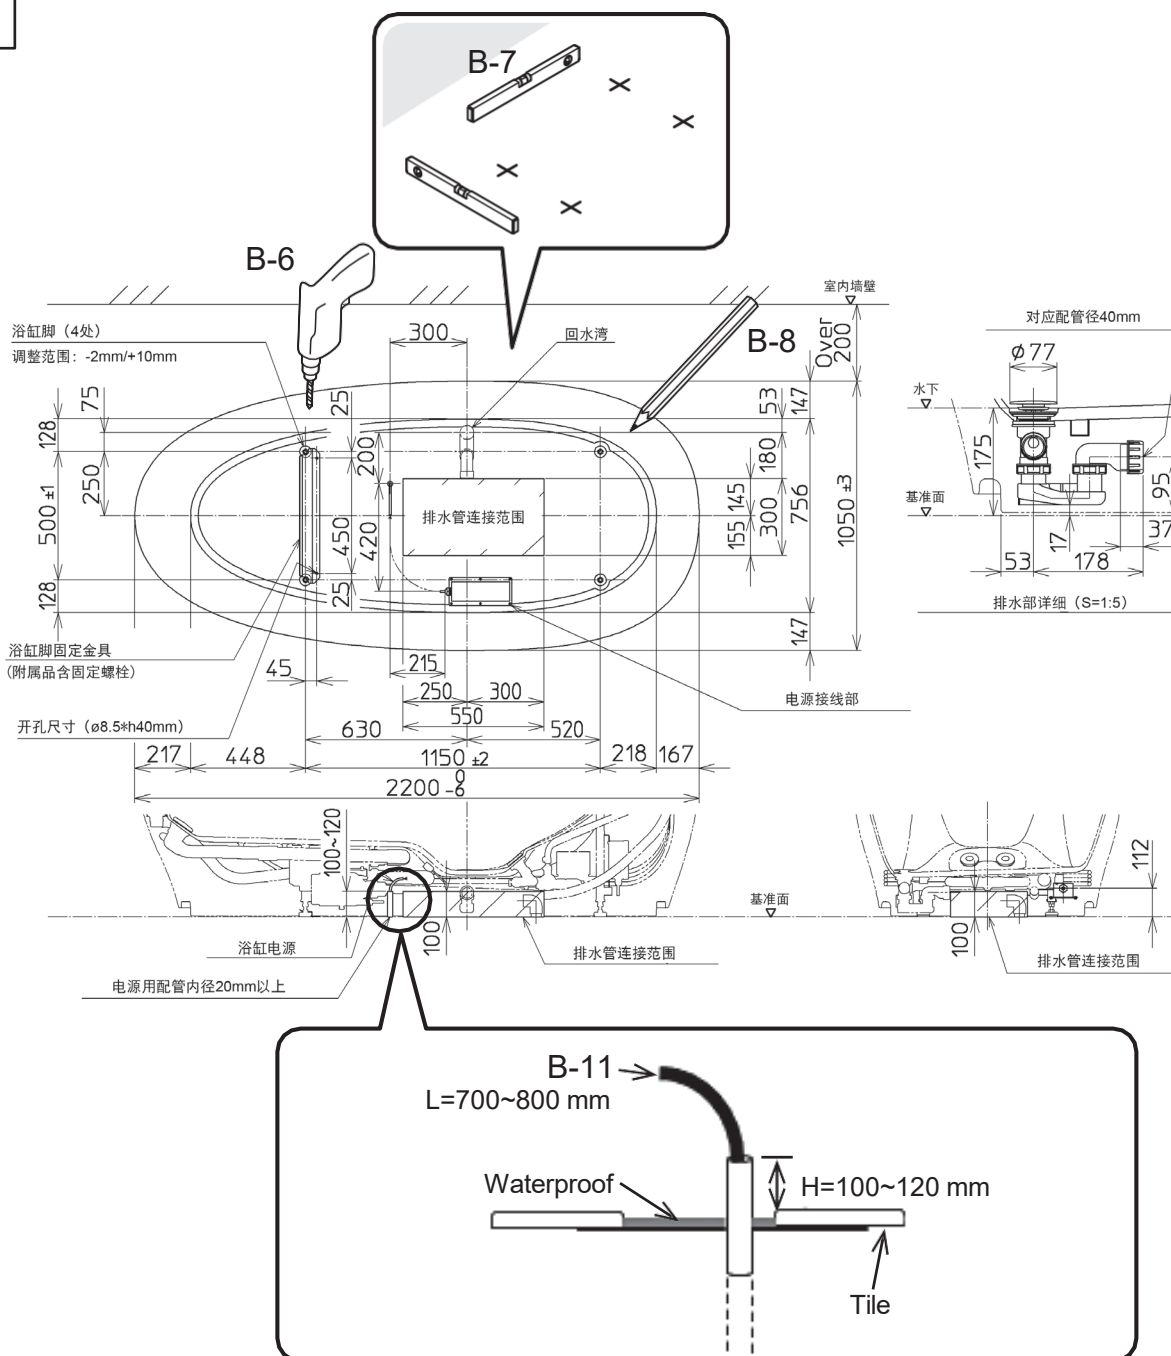


# Installing the bathtub

2

1






2

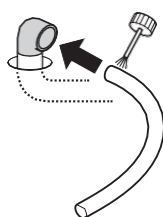


B-14

3

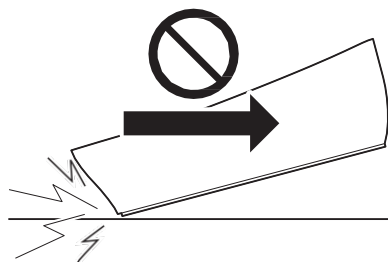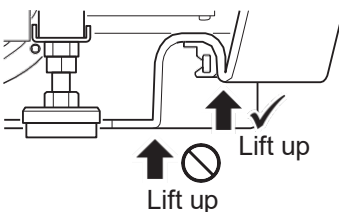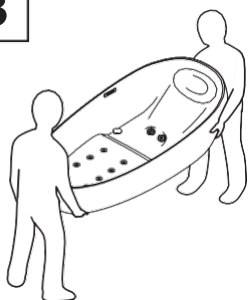


4

1


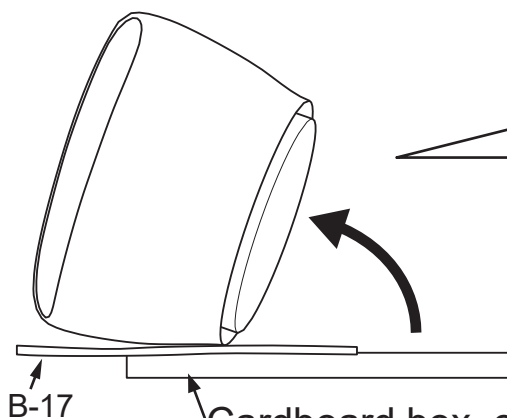


Other Choices

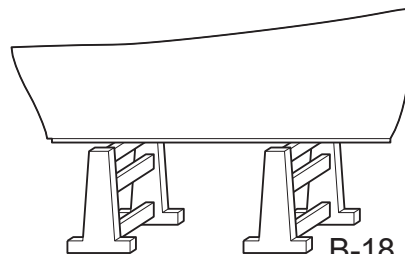

B-18

2

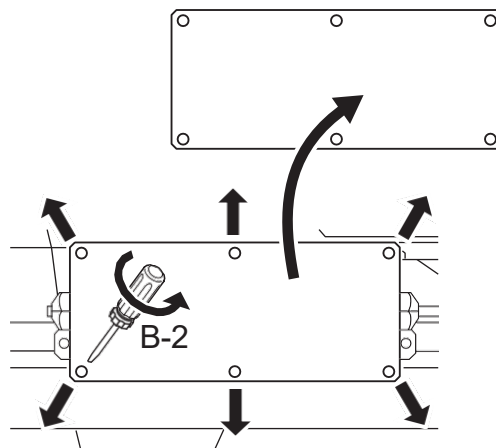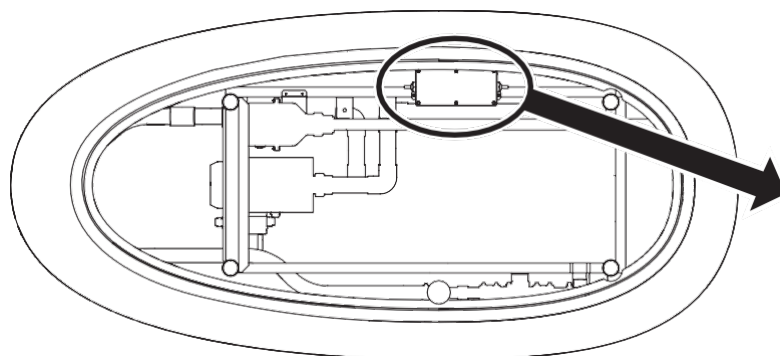




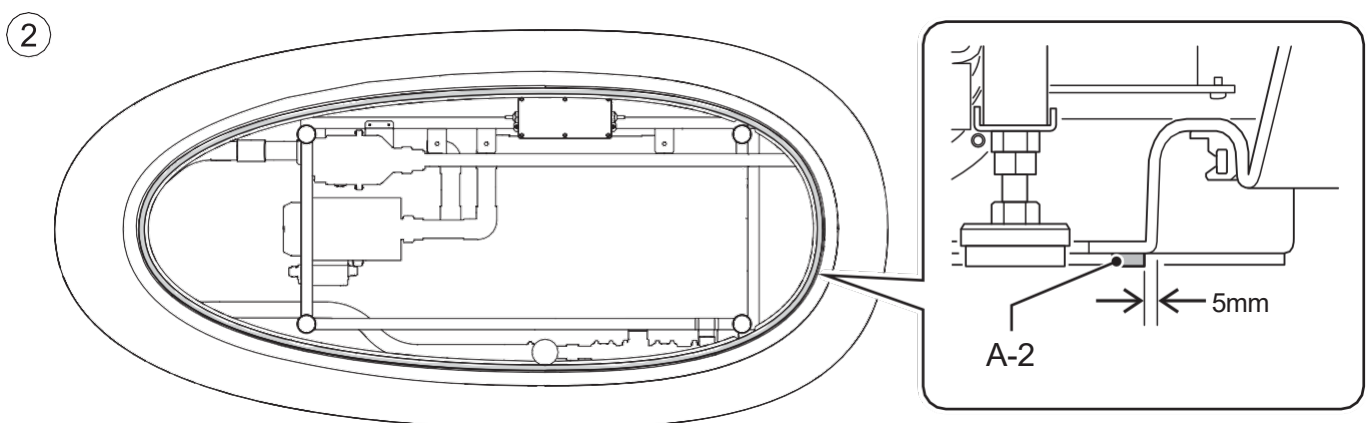


Diagram illustrating the assembly steps for the B-6 and B-12 components:


- Step 1: B-6 is inserted into the hole.
- Step 2: A-6 is inserted into the hole.
- Step 3: B-12 is inserted into the hole.
- Step 4: B-12 is inserted into the hole.
- Step 5: A-6 is inserted into the hole, and B-4 M10 is inserted into the hole.

## WARNING

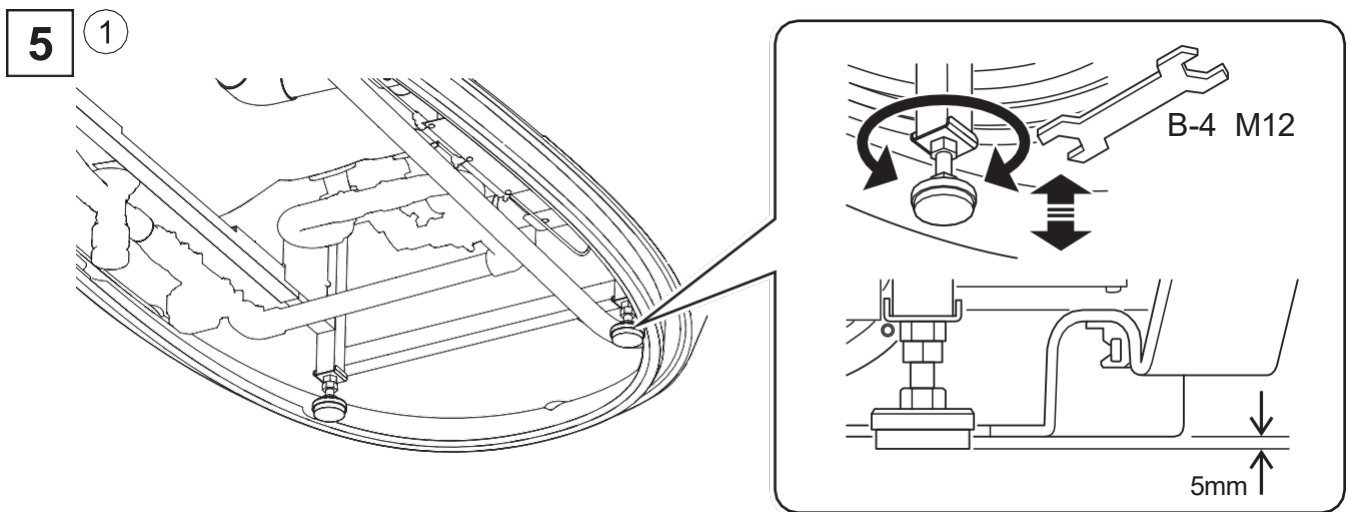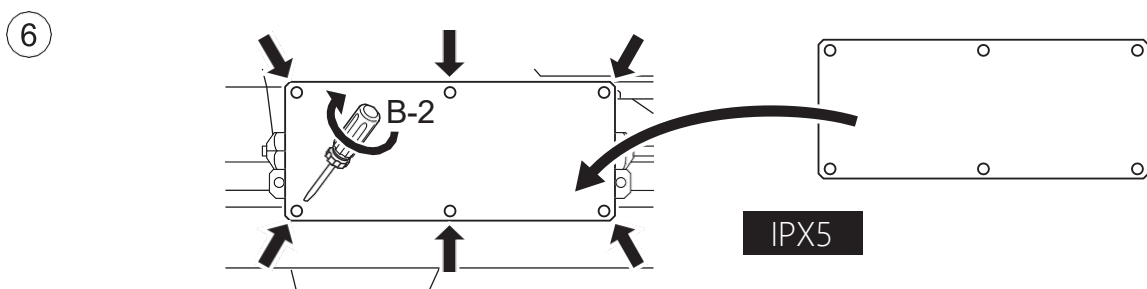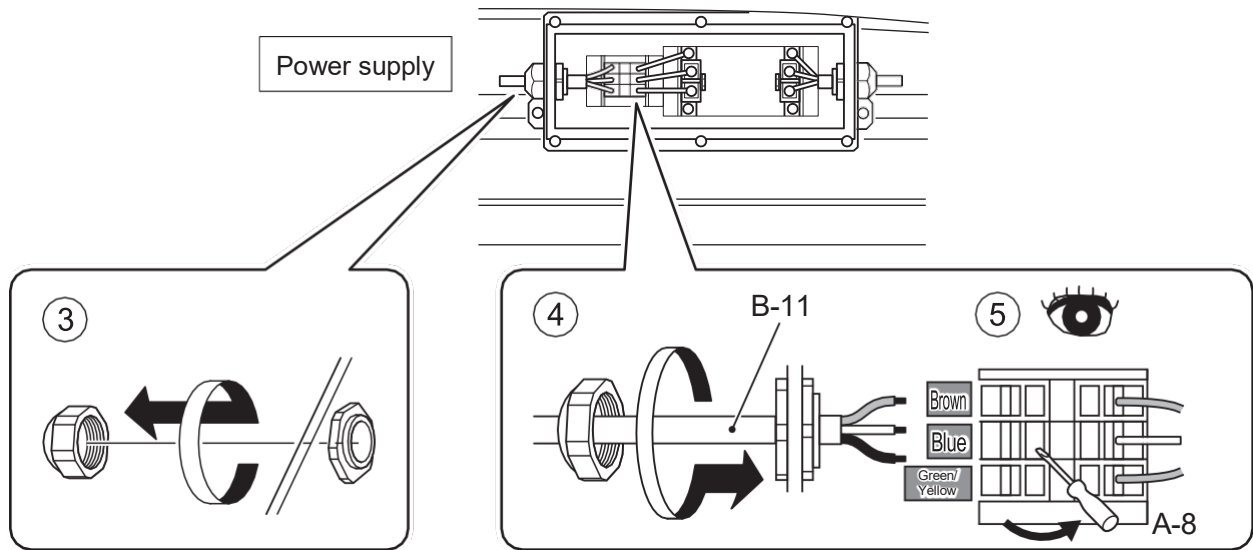

- If there are cavities, use an adhesive anchor to stabilise.


**7**

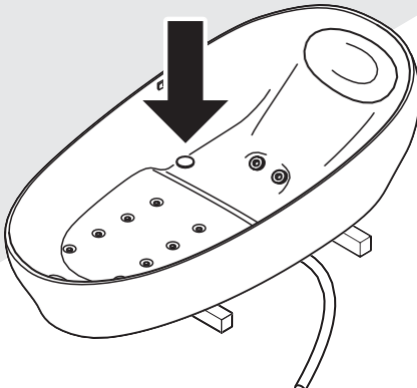

**8**



Diagram 8 illustrates the connection of the water supply line. The main illustration shows the bathtub with a curved arrow indicating the removal of the old supply line. A callout shows a cross-section of the tub's drain pan with a new supply line being installed. Another callout shows a close-up of the new supply line being connected to the tub's inlet valve using a union and a wrench.

Not available for Australia  
model (To be sourced  
externally if required)

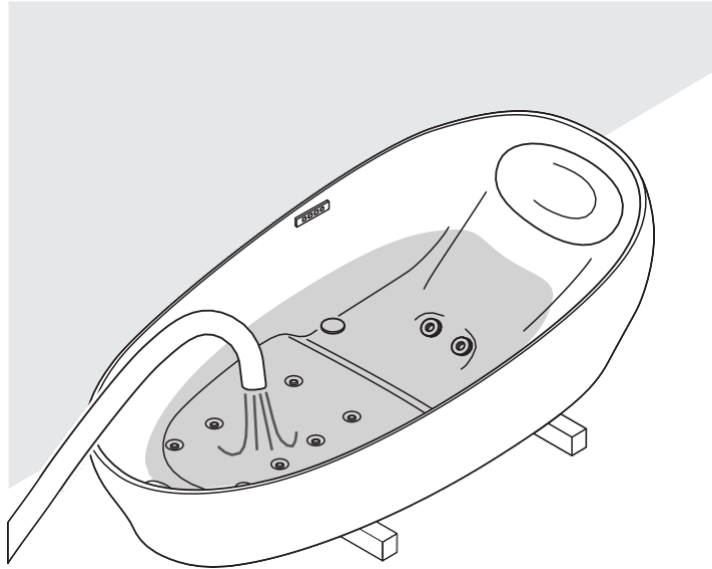

## Conduct a trial run

10

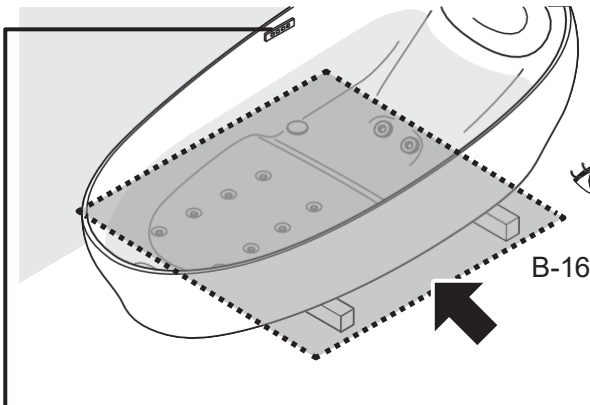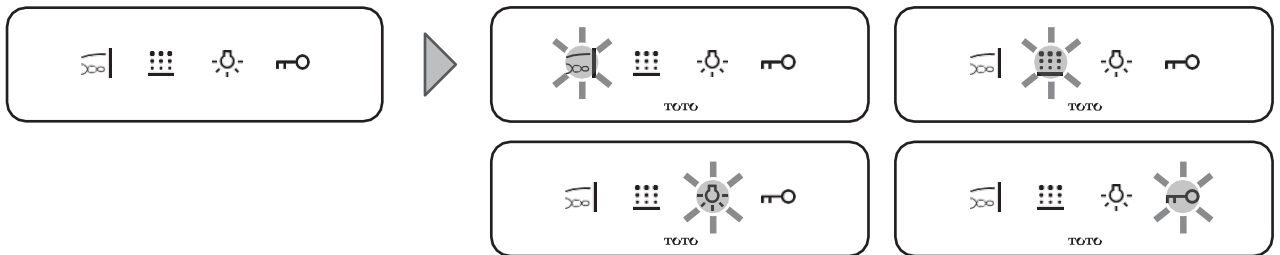

Check to see that there is no water leakage when the product is operating or stopped. Conduct a trial run for 10 minutes.




### If trouble occurs during the trial run

Symptoms	Processing
The controller does not light up, or operate any functions.	Is power being supplied?
	Has there been a power outage?
	Is it locked? Unlock by pressing and holding for over 3 seconds.
HYDROHANDS / NECK BATH	Is the water level in the bathtub too low? Fill the water above the intake parts.
The drain plug does not open or close.	Please call for a repair.



\*Please refer to the instruction manual for other symptoms.

11

1

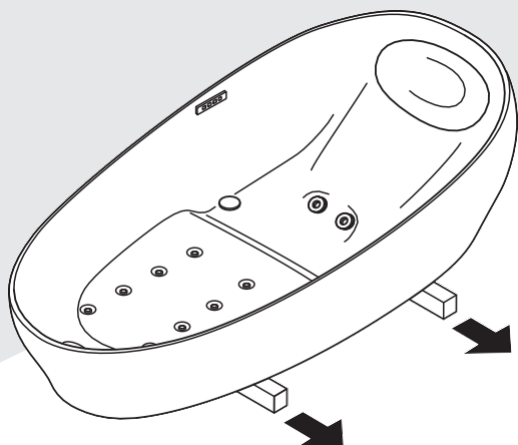

2

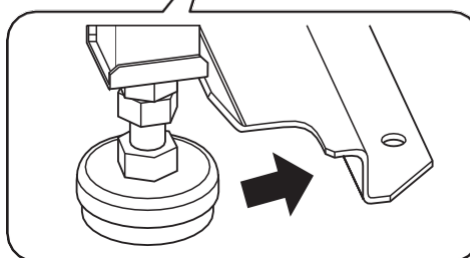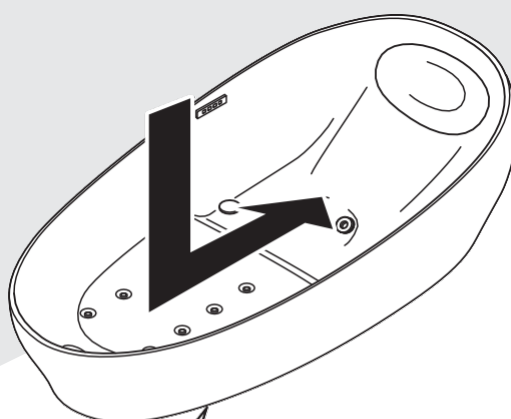

## WARNING




**Stabilise the bathtub with a fixing plate.**


- The bathtub may shake if it is not properly stabilised.

## Finishing

12

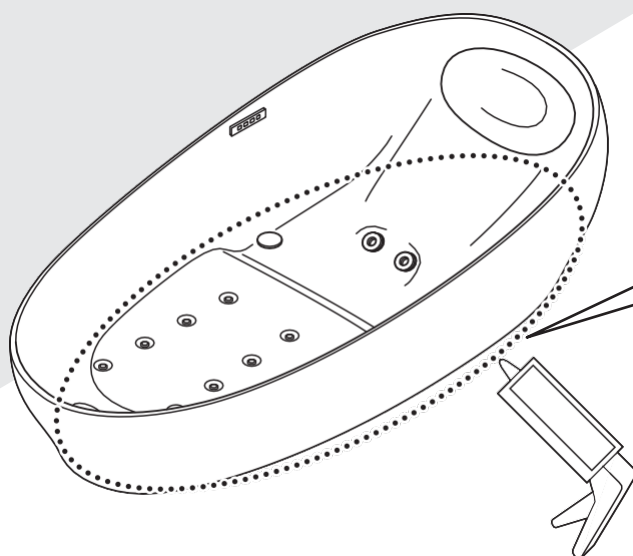

B-13

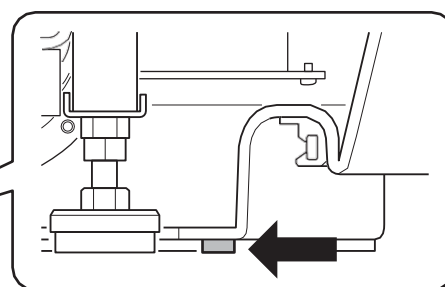

## WARNING



**Secure enough space between the bathtub and tiles, and fill that space with silicone that does not contain alcohol.**

