

A69.53.V4

Installation Instructions

1. Fasten lugs to wall at 50mm centres
2. Secure soap dispenser to lugs and fasten by tightening the grub screws with the allen key
3. Fill bottle with liquid soap
4. Slowly pump air out of the dispenser until air is purged out and the soap comes through. Once the dispenser is primed it will not need to be primed again unless the soap is allowed to run out completely.
5. To refill, remove the lid, fill and replace.

**** TO ENSURE SOAP DOES NOT HARDEN WITHIN THE PUMP, ALWAYS REFILL THE SOAP DISPENSER BEFORE TOTALLY EMPTY **** Do not leave the dispenser unused or for any length of time without thoroughly rinsing through with warm water. Hardened soap remaining in the dispenser may cause damage to the pump mechanism.

Liquid Soap Specification

Never use soaps with grit or abrasives in them.

Soap Solution shall be dispensed in a liquid form and should be:

- (a) vegetable oil based;
- (b) only use PH-neutral soap. PH value 6.5 - 7.5
- (c) anhydrous soap concentration range : 10-15%;
- (d) specific gravity range: 1.0 - 1.1;
- (e) viscosity range : max 1.0 centerpoise;
- (f) soap shall contain a humectant (anti coagulant);
- (g) soap shall be perfumed or non perfumed.

IMPORTANT: IF THE SOAP DOES NOT MEET THIS SPECIFICATION, THE WARRANTY WILL BE VOID.


Recommended Soap : Pamper white available from:

True Blue Chemicals
Unit 2/1 Endeavour Road
CARINGBAH NSW 2229
Ph: (02) 9540 1877

Cleaning

Keep soap and dirt from clogging the spout, plunger and valve mechanism. Warm water should be pumped through supply lines and valves at regular scheduled intervals.

The ideal care for all fittings is to dry them with a soft cloth after each use, which will prevent mineral deposits. Fittings should be regularly cleaned with warm water or a mild pH-neutral liquid soap and water and polished with a clean soft cloth. A Microfibre cloth is gentle and effective for cleaning without scratching and needs only to be dampened to clean the product.

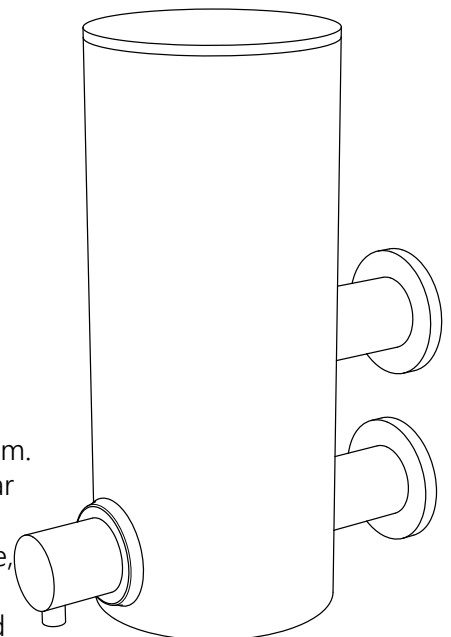


ICON

A69.53.V4

Installation Instructions

awTM

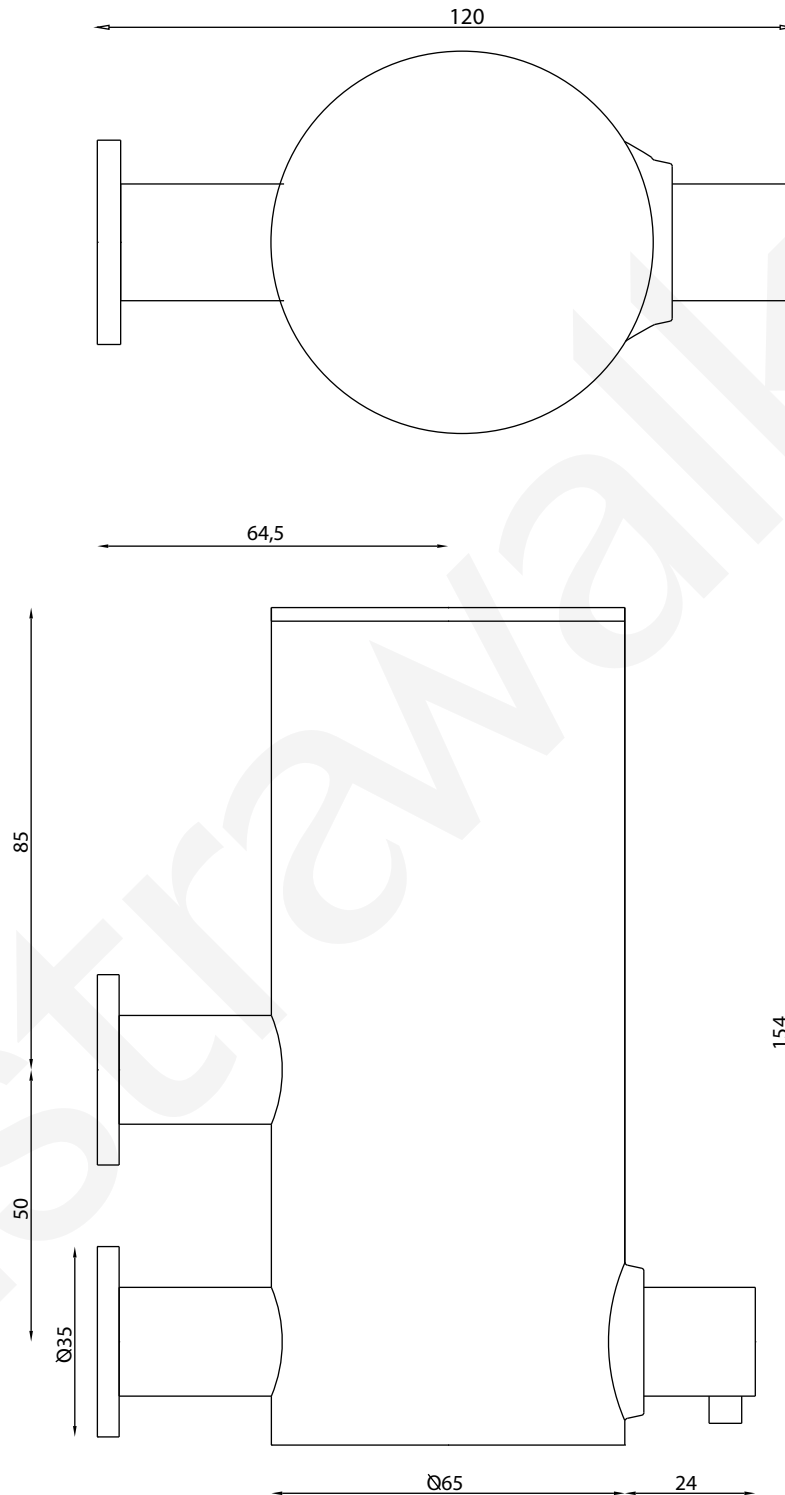

astrawalkerTM